





Setting Up Your Lockbox

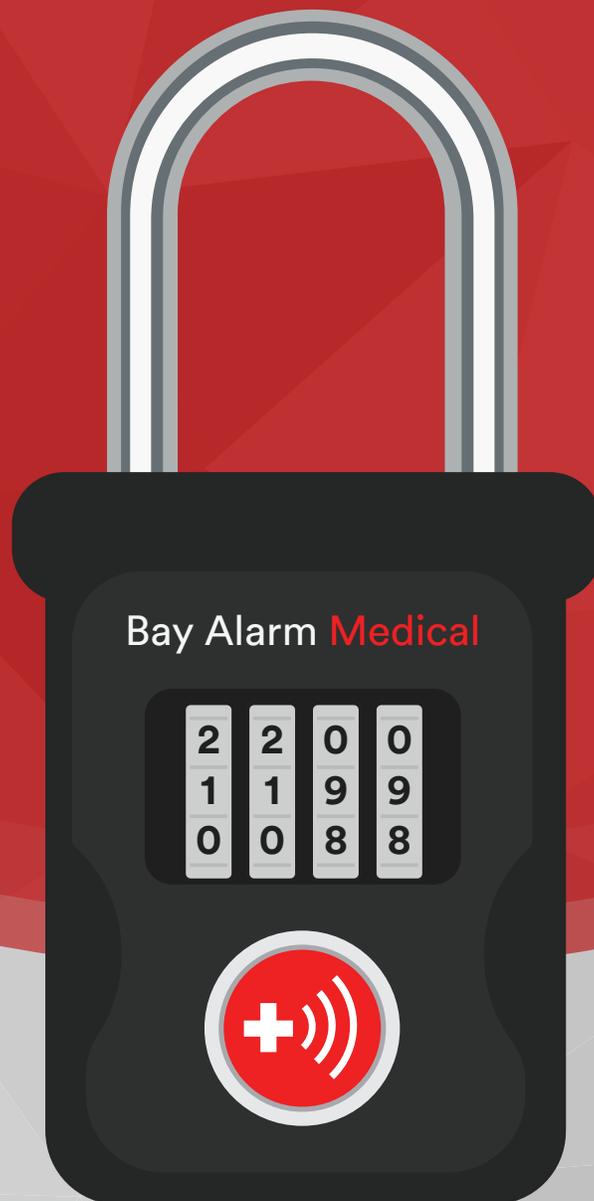

2019 EDITION


Changing Or Setting Up The Combination

1.

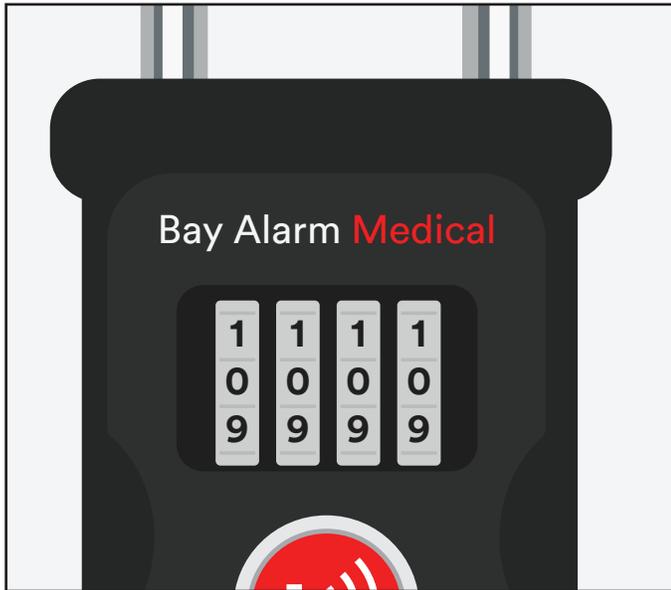


Set the Lockbox to the set combination or "0000" if setting up for the first time.

2.

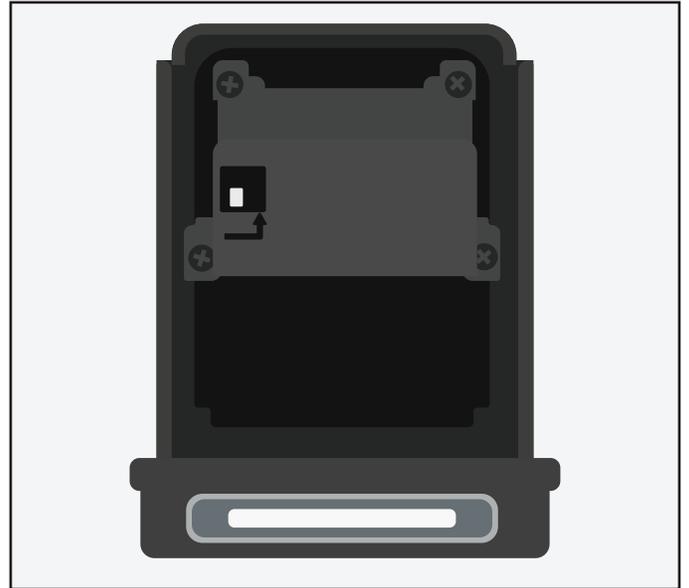


Turn over the Lockbox and pull back the silver loop to open the Lockbox.

3.

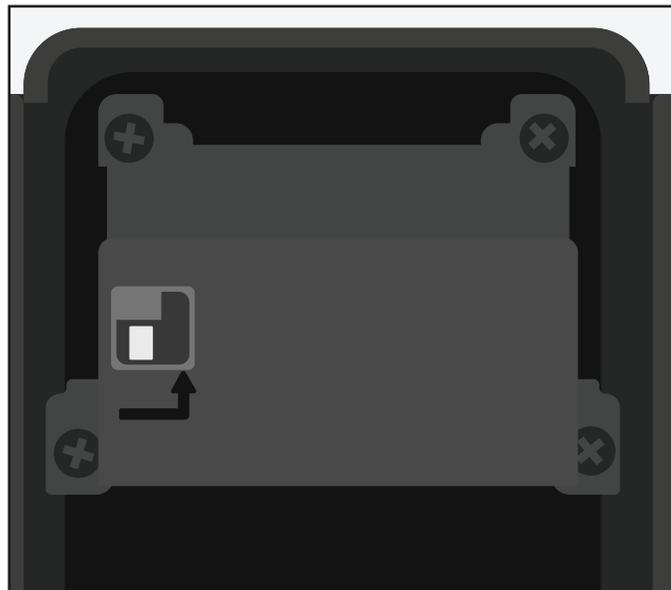

Remove the rubber plug and set it aside. It will be needed later.


4.

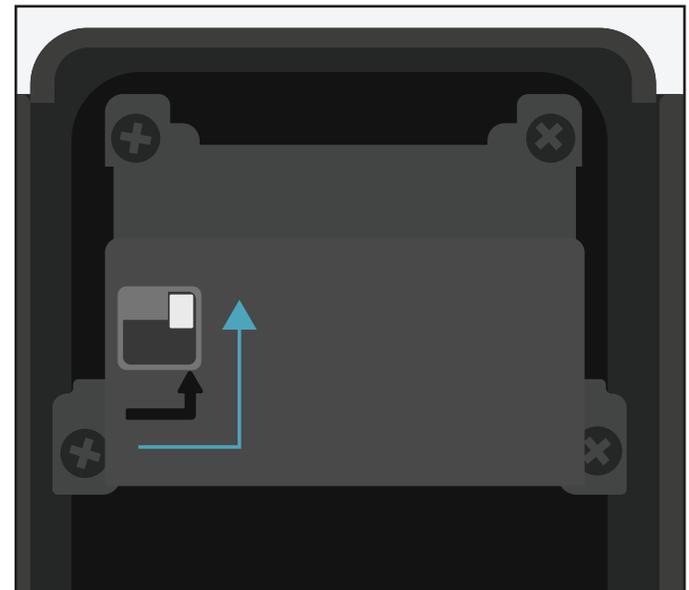

Move the silver lever up in the direction of the arrow.


Changing Or Setting Up The Combination (cont.)

5.

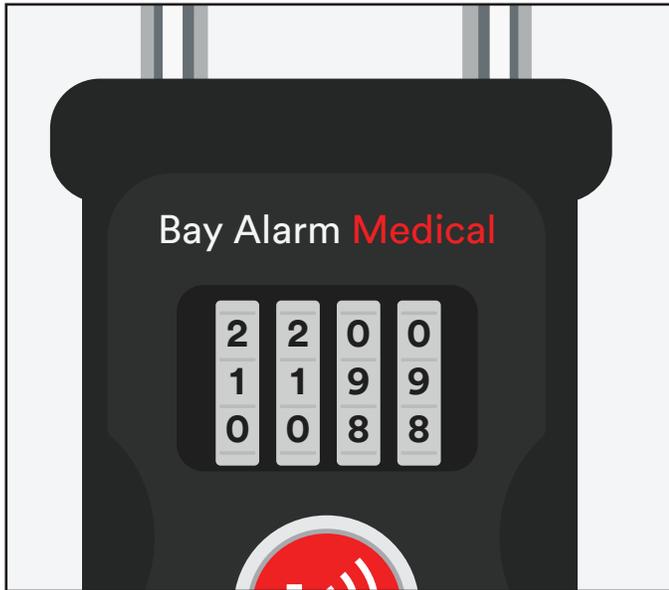


Rotate the number dials downward in order to set it to the desired combination while the Lockbox is open.

6.

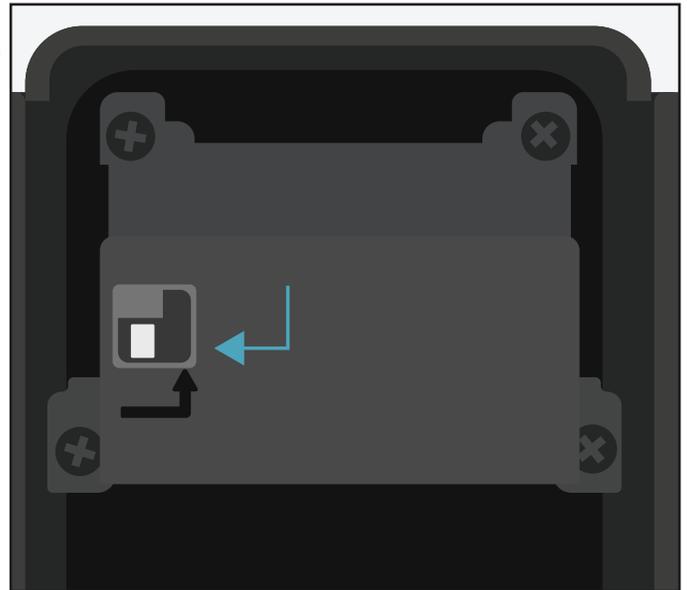


Move the silver lever back down to its default position. Be sure not to rotate the combination when moving the lever back.

7.

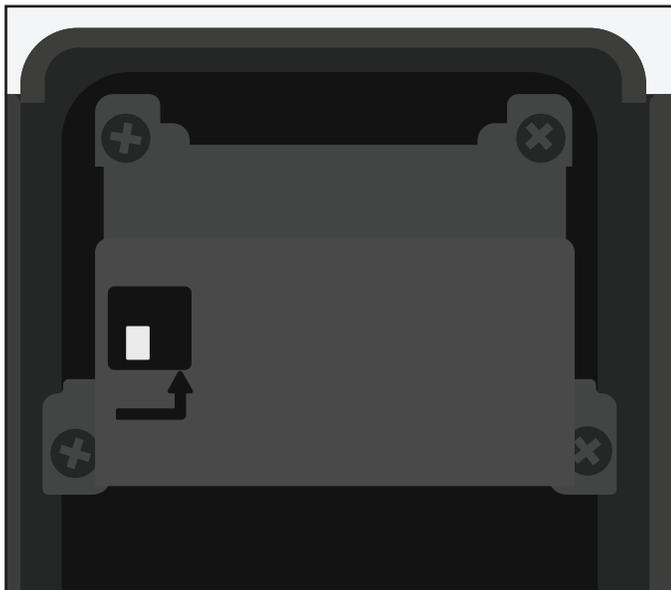

Re-insert the rubber plug.


8.

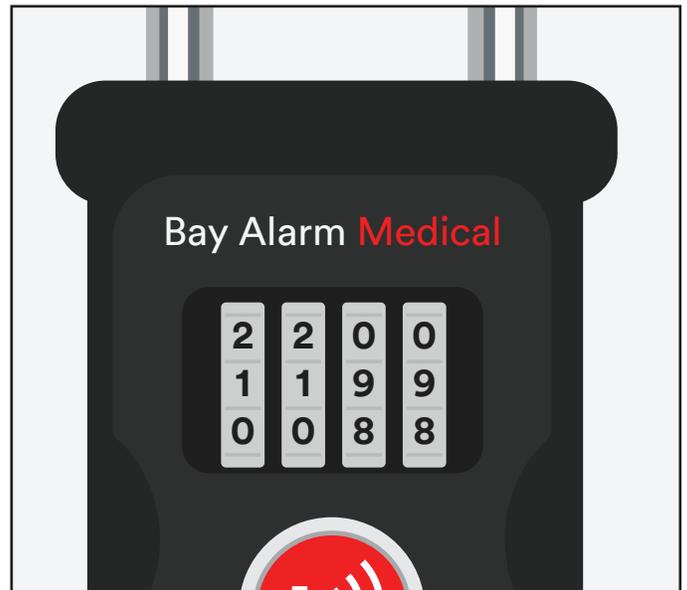


Test the Lockbox by opening and closing it with your combination.

Attaching The Lockbox To The Door


1. Open the Lockbox and slide the metal rectangular “release” latch to the left following the arrow. While holding the latch, pull up on the silver loop.

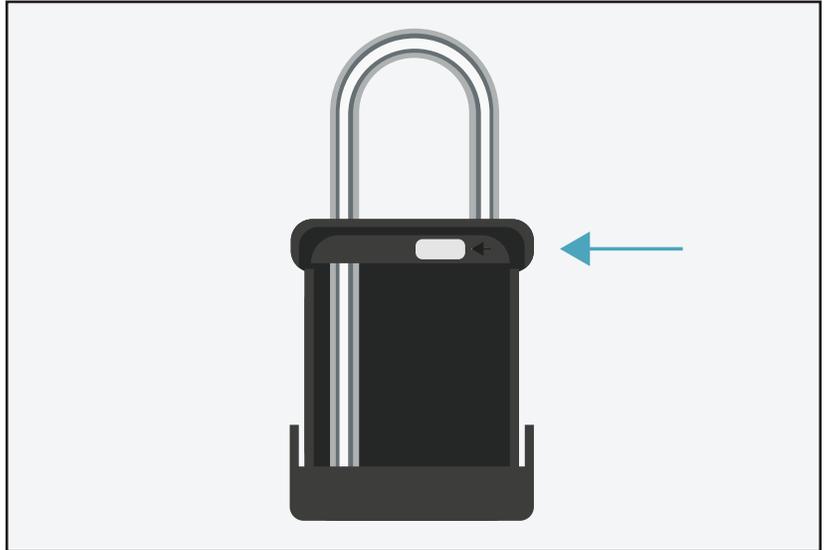

2. Place the Lockbox in the desired location and close the silver loop.

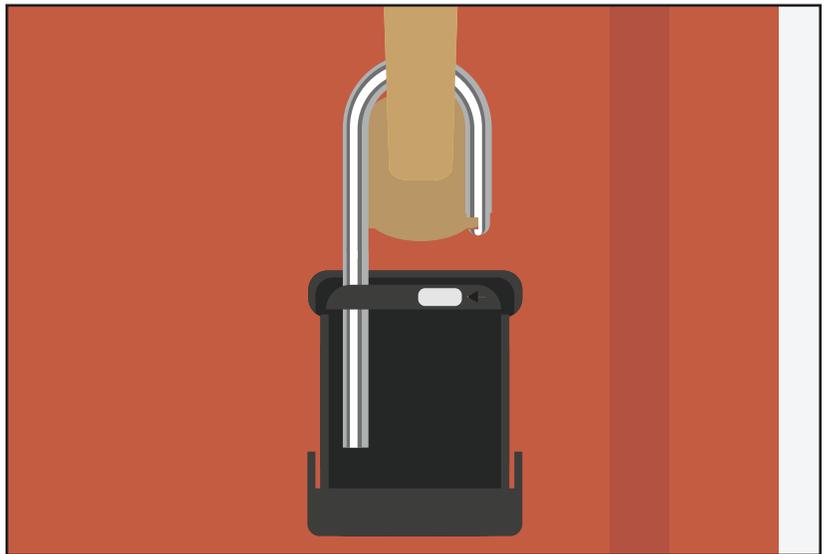

3. Place key(s) in the Lockbox and close the Lockbox. Jumble the combination to lock it.

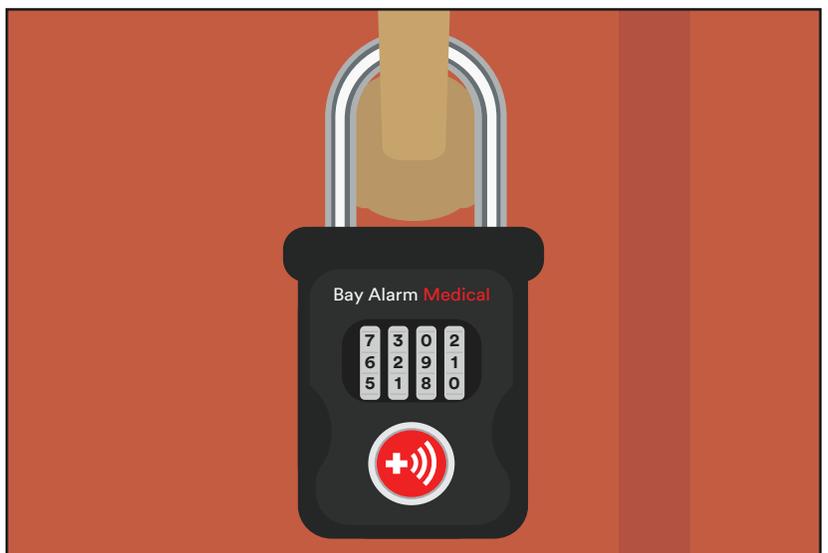

Record Your Combination

Please record your combination below or in a secured area. In the event that you forget or lose the combination, Bay Alarm Medical is not able to provide combination due to security reasons. We at Bay Alarm Medical value you and your loved one's security.

Combo #1 Name

Date Recorded

--	--	--	--

Combo #2 Name

Date Recorded

--	--	--	--

Combo #3 Name

Date Recorded

--	--	--	--

To learn more or for help setting up visit us at
www.bayalarmmedical.com/videos/
or call us at: **1-877-522-9633**

REFER A FRIEND

and get

ONE FREE

MONTH

for both of you!

To learn more or for help setting up visit us
at www.bayalarmmedical.com/videos/
or call us at: **1-877-522-9633**